

Side Light Blocker - Installation Instructions

Please follow these Installation Instructions
You will need a pencil, tape measure, drill, screwdriver.

Revised 5/16/17

The Side Light Blocker channels are for inside mount only. They can't be installed as outside mount or on the mullion between the windows.

Note: Shade must be installed before you start side light blocker installation


Step 1. ADJUSTING THE SIDE LIGHT BLOCKER CHANNEL FOR INSTALLATION

Place the side Light Blocker channel into the window frame, window molding or wall area to be mounted. Mark locations inside the channel for drilling.

Note: If trimming the side channel is necessary for a proper fit, it can easily be cut with a metal hacksaw blade. Make sure to mark the channel with the straight line before cutting.


Step 2. INSTALL THE CHANNELS (Channels can be installed in front of the fabric as well as behind the fabric).

Lineup center of the channel with the fabric.

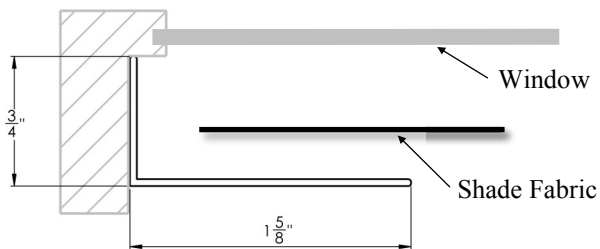


Attach the mounting channel with screws.

Note: Top view shown.

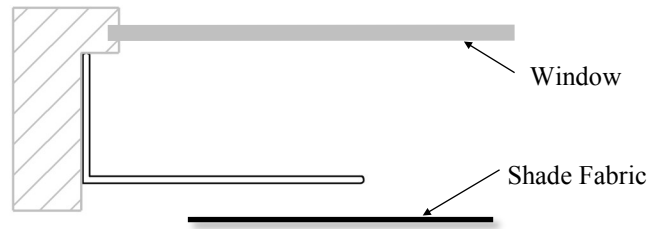


Make sure the fabric coming off the tube is not rubbing on the top of channel.

INSIDE MOUNT INSTALLATION ONLY



Install the channels to follow the shape of the window.
Use screws every 18". Add screws as needed.

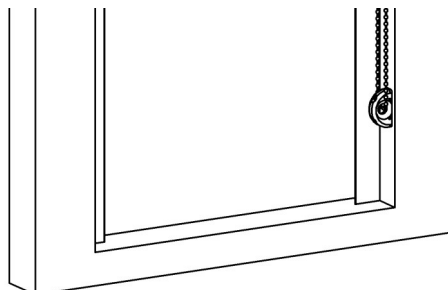

Side channels installed on the **inside** frame of the window